



Toshiba SD-K740 Front Panel Replacement

This is a guide to remove the front panel of the Toshiba SD-K740 DVD player.

Written By: Joe Murphy



INTRODUCTION

This guide gives instructions on how to remove the front panel of the Toshiba SD-K740 DVD player, a necessary step to access all parts for repair/replacement.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-


Step 1 — Top Panel



⚠ Make sure the DVD player is unplugged before beginning.

- Remove the three .303 inch screws from the back panel using a #0 Phillips head screwdriver.

Step 2

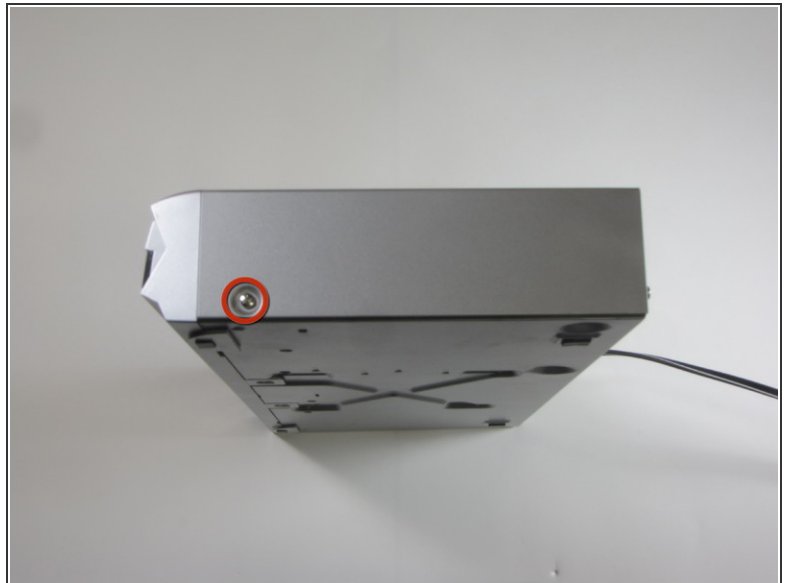

ⓘ Turn the DVD player on its side.

- Remove the .303 inch screw.

ⓘ Now flip the DVD player onto its other side.


- Remove the .303 inch screw from this side.

Step 3



- ❗ Flip the DVD player over onto its front face.
- Remove the back panel by lifting up and pulling it towards yourself.

Step 4 — Front Panel

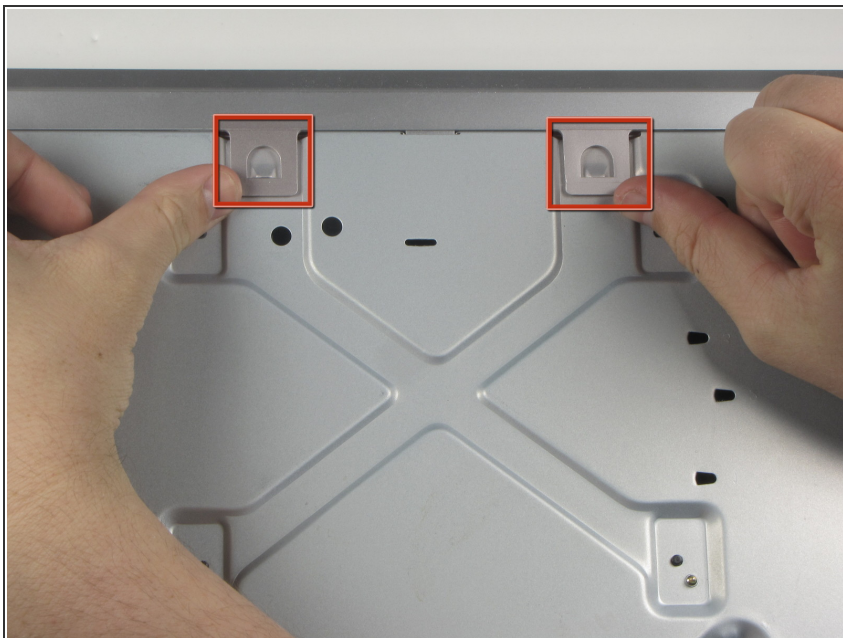


- ❗ Flip the DVD player so its top is sitting on your working surface.
- Lift and push away each of the two tabs located in the middle of the player.
- ⚠ The front panel will not come off during this step, so do not force it.

Step 5



- ❗ Flip the DVD player on its side.
- Lift and slide forward a single tab on the side.
- ⚠ The front panel will not come off during this step, so do not force it.

Step 6

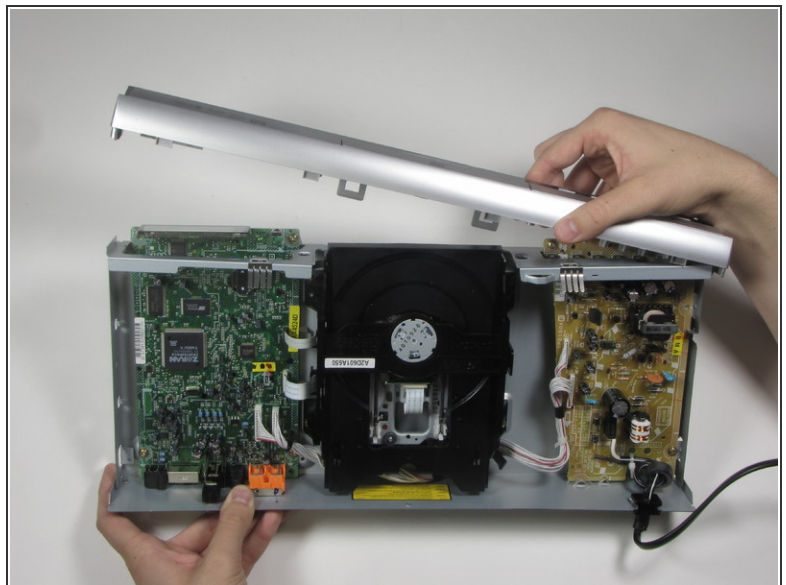

- Grasp the front panel and pull forward and to your right to remove.

To reassemble your device, follow these instructions in reverse order.

